



Replacement of O-rings/sealings* for QT1200 & QT2100

Shut off the water!

1. Remove the screw (Allen key 2mm)
2. Pull to remove the spout
3. Screw off the connection part (Allen key 10mm)
4. Screw off the bottom housing (A+B)
5. Lift off the housing (A)
6. Replace the o-rings/sealings

*O-rings/sealings: Item no.: QR0135